


# YZ100K

# SUPPLEMENTARY ASSEMBLY MANUAL

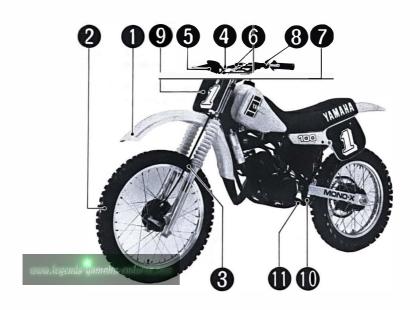

LIT-11666-03-78 5x3-28107-11

YZ100K SUPPLEMENTARY ASSEMBLY MANUAL
© 1982 by Yamaha Motor Corporation, U.S.A.
1st edition, JUNE 1982
All rights reserved. Any reprinting or
unauthorized use without the written permission
of Yamaha Motor Corporation, U.S.A., is
expressly prohibited.
Printed in U.S.A.
LIT-11666-03-78

## **GLOSSARY**

(Symbols most commonly used)

C: The "C" marked parts are contained in the small carton box.

S: The "S" marked parts are contained in the styrofoam tray (Upper or Lower)

V: The "V" marked parts are contained in the vinyl bag.

•: The asterisked (\*) parts are temporarily fitted on the machine.

#### **FOREWORD**

This Supplementary assembly manual has been prepared to introduce the setup procedures and predelivery service for the YZ100K.

For complete information, it is necessary to use the YZ/IT series Basic assembly manual (LIT-11666-03-31) together with this Supplementary assembly manual.

#### NOTICE

This serive specifications given in this Supplementary assembly manual are based on the model as manufactured. Modifications and significant changes in specifications and/or procedures will be forwarded to Authorized Yamaha Dealers. The procedures below are described in the order that the procedures are carried out correctly and completely. Failure to do so can result in poor performance and possible harm to the machine and/or rider.

CONCERNING CRATE DAMAGE: Follow the instructions in the Dealer warranty has	andbook. Procedure section.

Particularly important information is distinguished in this manual by the following notations:

NOTE: A NOTE provides key information to make procedure easier or clearer.

WARNING:

CAUTION: A CAUTION indicates special procedures that must be followed to avoid damage to the machine.

A WARNING indicates special procedures that must be followed to avoid injury to a machine operator or person inspecting or repairing the machine.

SERVICE DEPT.
INTERNATIONAL DIVISION
YAMAHA MOTOR CO., LTD.

## SETUP PROCEDURES

NOTE: \_\_

Please read the following chapters in the Basic assembly manual before proceeding to the

**CHAPTER 1: INTRODUCTION** 

CHAPTER 2: SETUP AND PREDELIVERY

CHECK

**CHAPTER 3: TOOLS AND TORQUE** 

SPECIFICATIONS

**CHAPTER 4: CRATES** 

**CHAPTER 5: INSTALLATION** 

**PROCEDURES** 

#### Parts list

No.	Part name	G,tA	Locating mark	Remarks		
1.	Front fender			5 F.F-A		
1	Front fender	1	s			
2	Hexagon bolt with spring wesher	4	v	d=6mm (0.24in), l=20mm (0.79in)		
3	Plain washer	4	V	d=6mm (0.24in)		
4	Special washer	4	V	d=6mm (0.24 ln)		
2	. Front wheel			5 F.W-A		
1	Front wheel	1	S			
2	Front wheel axle	1		d=12mm (0.47in)		
3	Wheeleaxle collar	1	V	d=12mm (0.47in)		
4	Brake shoe plate exembly	1	s			
5	Plein washer	1	•	d=12mm (0.47in D=22mm (0.86in d=12mm (0.47in		
6	Castle nut	1				
7	Cotter pin	1	V			
3	. Cable holder	(Lei	ft)	5 C.H-E		
1	Cable holder (Left end Right)	2				
2	Panhead screw wit spring washer	2	•	d=6mm (0.24 in), &=16mm (0.64 in)		
4	, Handlebar			5 H.B-A		
1	Handlebar	1	s			
2	Flange bolt	4	V	d=8mm (0.32in) £=36mm (1.38in)		
3	Handleber upper holder	2	v ti	ww.legends=ya		

#### Parts list


Vo.	Pert name	G,tA	Locating merk	Remarks		
5.	Throttle grip			5 T.G-B		
1	Throttle grip	1	*			
2	Panhead screw	2	*	d=5mm (0.2in) L=15mm (0.59in)		
6.	. Brake and clu	[5] B.C-A				
7.	Fuel tank bra	athe	r pipe	5 F.B-A		
1	Fuel tank breather pipe	1	s	Rubber		
8	. Engine stop s	witc	h	5 E.S-B		
1	Engine stop switch	1	•			
2	Panhead screw	1	٧	d=3mm (0.12in)		
3	Plain washer	1	V	d=3mm (0.12 in)		
4	Engine stop switch holder (Upper and Lower)	2	v			
5	Hexagon nut	1	V	d=3mm (0.12 in)		
6	Handleber band	2	S	Plastic		
9	. Number plate	,		5 N.P-A		
1	Number plate	1	S			
2	Panheed screw	1	V	d=6mm (0.24in), £=16mm (0.64in)		
10	). Footrest (Let	ft)		5 F.R-C		
1	Footrest (Left)	1	V			
2	Hexagon nut	1	V	d=8mm (0.32in), £=28mm (1.1in)		
3	Return spring	1	V			
4	Self locking nut	1	V	d=8mm (0.32in)		
11	I. Side stand			5 S.S-B		
	Side stand	1	S			
1	SIDE STRING					


aha-enduros.com


#### CABLE ROUTING

#### WARNING:

Proper cable and lead routing is essential to insure safe vehicle operation.

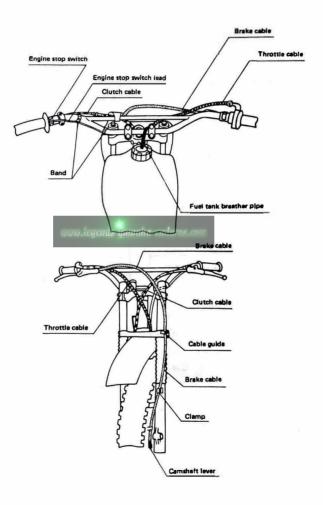

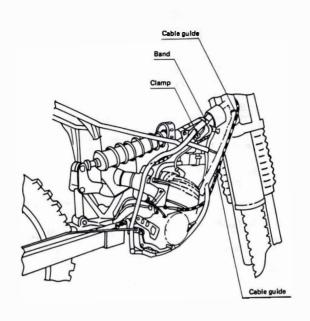

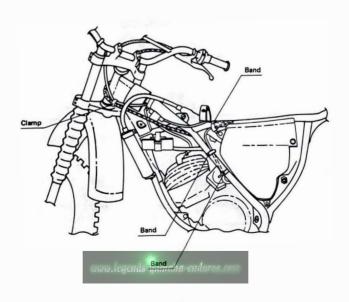

# ADJUSTMENTS AND PREDELIVERY SERVICE

NOTE: \_

Please read the following chapter in the Basic assembly manual before proceeding to the adjustments and predelivery service.

**CHAPTER 6. APPENDICES** 

Front brake adjustment [F.B-A]

Front brake lever free play: 5 ~ 8 mm (0.2 ~ 0.3 in)

Rear brake adjustment [R.B-A]

Rear brake pedal free play: 20 mm (0.8 in)

Rear brake pedal position adjustment [R.P-A]

Clutch adjustment [C.A-A]

Clutch lever free play: 2 ~ 3 mm (0.08 ~ 0.12 in)

Throttle cable adjustment [T.C-A]

Throttle cable free play: 3 ~ 5 mm (0.12 ~ 0.21 in)

Fuel draining (F.D-A)

Transmission oil level check [T.L-A]

Drive chain tension check [D.C-A]

Drive chain deflection:

35 mm (1.47 in)

Troubleshooting [T.S-A]

### **APPENDICES**

#### SERVICE DATA

Idling engine speed:	As desired		
Spark plug:			
Туре	N-84 (CHAMPION)		
Gap	0.5~0.6 mm (0.020~0.024 in)		
Fuel:	1		
Recommended fuel	Premium gasoline (Mixed gas 24:1)		
Fuel tank capacity	8.2 L (1.8 Imp gal, 2.2 US gal)		
Engine oil:			
Recommended oil	Yamalube Racing 2-cycle oil (See Owner's manual)		
Transmission oil:			
Recommended oil	Yamalube 4-cycle oil or SAE 10W30 motor oil		
Oil quantity (Periodic oil change)	550~650 cm <sup>3</sup> (0.58~0.69 US qt, 0.48~0.57 Imp qt)		
Tire pressure (Cold tire pressure):			
Front	98 kPa (1.0 kg/cm², 14 psi)		
Rear	98 kPa (1.0 kg/cm², 14 psi)		

www.legends=yamaha=enduros.com

#### TORQUE SPECIFICATION CHART

Parts to be tightened		Bolt/Nut size	Tightening torque		
		BOIL/MIL 2128	Nm	m-kg	ft·lb
Engine:					
Spark plug		M14	20	2.0	14.0
Engine drain bolt		M12	20	2.0	14.0
Chassis:					
Front fender	(F.F-A #1)	M6 x 1.0	6	0.6	4.3
Front wheel axle and nut	(F.W-A #1)	M12 x 1.25	74	7.4	53.0
Handle crown and handlebar upper holder	(H.B-A #1)	MB x 1.25	23	2.3	17.0
Footrest	(F.R-C #1)	MB x 1.25	15	1.5	11.0
Handle crown and innar tuba		MB x 1.25	23	2.3	17.0
Handle crown and steering shaft		M14 x 1.25	59	5.9	43.0
Steering shaft securing nut		M25 x 1.0	10	1.0	7.2
Engine mounting					
Front		M8 × 1.25	30	3.0	22.0
Lower		M8 x 1.25	30	3.0	22.0
Rear wheel axle and nut		M14 x 1.5	85	8.5	61.0
Sprocket wheel mounting nut		MB x 1.25	30	3.0	22.0
Rear shock absorber and frame	- 1	M10 x 1.25	32	3.2	23.0
Pivot shaft and nut	- 1	M16 x 1.5	85	8.5	61.0
Footrest bracket and frame (Right)	- 1	M10 x 1.25	64	6.4	46.0
Footrest bracket and frame (Right)	- 1	M12 x 1.25	88	8.8	64.0
Camshaft lever and camshaft (Front brake)		M6 x 1.0	10	1.0	7.2
(Rear brake)		M6 x 1.0	10	1.0	7.2
"L" shape arm and frame		M16 x 1.5	85	8.5	61.0
Rear shock absorber and "L" shape arm		M10 x 1.25	32	3.2	23.0
"L" shape arm and "I" shape arm		M12 x 1.25	59	5.9	43.0

#### OWNER'S TOOL KIT

No.	Part name	Q'ty
1	Owner's tool bag	1
2	Special spanner (19-22)	1
3	Spark plug wrench (21)	1
4	Hexagon wrench (8)	1
5	Rotor puller	1
8	Special spanner (32)	1

mente leavads vamaha enduros con

## -MEMO-

www.legends-yamaha-enduros.com

