



# 1976-1977 MODELS HANDLEBAR SWITCH KNOB REPLACEMENTS

Replacement knobs for handlebar switches are now available. Parts necessary for installation are included in each knob set.

LIGHTING SWITCH KNOB



FLASHER (turn indicator) SWITCH

FLASHER SWITCH KNOB

SET PART NUMBER	HANDLE SWITCH NO.	MODEL APPLICATION
360-W0087-20-00	360-83973-02-00	RS100C, RD125B/C
	397-83973-10-00	RD250A/B/C
	444-83972-03-00	RD200A/B/C
	498-83972-60-00	DT125A/B/C
	498-83972-61-00	DT100C, DT250B, DT400B
	584-83973-00-00	DT175C, DT250C, DT400C
	1E6-83972-00-00	XS650C
	1T2-83972-00-00	DT250D, DT400D, XT500C
	1T9-82910-00-00	XT500D DT100D
1A0-W0087-20-00	1A0-83973-01-00	RD400C, RD400D
	1J7-83973-01-00	XS750D, XS750 2D
	1T3-83973-00-00	XS650D

LIGHTING SWITCH

SET PART NUMBER	HANDLE SWITCH NO.	MODEL APPLICATION
444-W0087-10-00	444-83972-03-00	DT125A/B/C
	498-83972-60-00	DT100C, DT250B, DT400B
	498-83972-61-00	DT175C, DT250C, DT400C
1E6-W0087-10-00	444-83972-04-00	DT125C
	498-83972-62-00	DT175C, DT250C, DT400C
	1E6-83972-00-00	DT250D, DT400D, XT500C
	1T2-83972-00-00	XT500D
	558-83972-60-00	DT100C
397-W0087-30-00	397-83963-11-00	RD200C
	584-83963-00-00	XS650C/D
	1A0-83975-00-00	RD400C/D
	1A8-83963-00-00	XS360C/D
	1T9-82920-90-00	DT100D
	1J7-83963-00-00	XS750D, XS750 2D

### ENGINE STOP SWITCH

SET PART NUMBER	HANDLE SWITCH NO.	MODEL APPLICATION
444-W0087-10-00	437-83976-01-00 444-83975-01-00	DT100A/B/C, DT175A/B/C, DT250A/B/C, DT360A, DT400B/C DT125A/B/C
1E6-W0087-10-00	437-83976-02-00 444-83975-02-00 1E6-83976-00-00	DT100C, DT175C, DT250C, DT400C DT125C XT500C, XT500D

### DIMMER SWITCH

SET PART NUMBER	HANDLE SWITCH NO.	MODEL APPLICATION
360-W0087-10-00	360-83973-02-00 397-83973-10-00 584-83973-00-00	RS100C, RD125B/C, RD250A/B RD200A/B/C XS650C
444-W0087-10-00	444-83972-03-00 498-83972-60-00 498-83972-61-00	DT125A/B/C DT100C, DT250B, DT400B DT175C, DT250C, DT400C
1E6-W0087-10-00	444-83972-04-00 498-83972-62-00 1E6-83972-00-00 1T2-83972-00-00 1T9-83910-00-00 558-83972-00-00	DT125C DT175C, DT250C, DT400C DT250D, DT400D, XT500C XT500D DT100D DT100C
1A0-W0087-10-00	584-83973-01-00 1A0-83973-01-00 1J7-83973-01-00 1T3-83973-00-00	XS650C RD400C/D, XS360C/D, XS500C/D XS750D, XS750 2D XS650D

SWITCH PART NO.	PRICE
360-W0087-10-00	\$ 1.50-A
444-W0087-10-00	1.50-A
1A0-W0087-10-00	1.50-A
1E6-W0087-10-00	1.50-A
360-W0087-20-00	1.20-A
1A0-W0087-20-00	1.20-A
397-W0087-30-00	1.20-A