

www.legends=yamaha-enduros.com

YZ100J

SUPPLEMENTARY ASSEMBLY MANUAL



FOREWORD

This Supplementary assembly manual has been prepared to introduce the setup procedures and predelivery service for the YZ100J.

For complete information, it is necessary to use the YZ/IT series Basic assembly manual (LIT-11666-03-31) together with this Supplementary assembly manual.

NOTICE

The service specifications given in this Supplementary assembly manual are based on the model as manufactured. Modifications and significant changes in specifications and/or procedures will be forwarded to Authorized Yamaha Dealers. The procedures below are described in the order that the procedures are carried out correctly and completely. Failure to do so can result in poor performance and possible harm to the machine and/or rider.

CONCERNING CRATE DAMAGE:	
Follow the instructions in the Dealer warranty handbook, Procedure section.	Alexander -

Particularly important information is distinguished in this manual by the following notations:

NOTE:

A NOTE provides key information to make procedure easier or clearer.

CAUTION:

A CAUTION indicates special procedures that must be followed to avoid

damage to the machine.

WARNING:

A WARNING indicates special procedures that must be followed to avoid injury to a machine operator or person inspecting or repairing the machine.

SERVICE DEPT.
INTERNATIONAL DIVISION
YAMAHA MOTOR CO., LTD.

YZ100J SUPPLEMENTARY ASSEMBLY MANUAL

© 1981 by Yamaha Motor Corporation, U.S.A. 1st edition, November 1981 All rights reserved. Any reprinting or unauthorized use without the written permission of Yamaha Motor Corporation, U.S.A., is expressly prohibited. Printed in U.S.A. LIT-11666-03-17

GLOSSARY

(Symbols most commonly used)

- C: The "C" marked parts are contained in the small carton box.
- S: The "S" marked parts are contained in the styrofoam tray (Upper or Lower)
- V: The "V" marked parts are contained in the vinyl bag.
- *: The asterisked (*) parts are temporarily fitted on the machine.

SETUP PROCEDURES

NOTE:

Please read the following chapters in the Basic assembly manual before proceeding to the setup.

CHAPTER 1: INTRODUCTION

CHAPTER 2: SETUP AND PREDELIVERY

CHECK

CHAPTER 3: TOOLS AND TORQUE


SPECIFICATIONS

CHAPTER 4: CRATES

CHAPTER 5: INSTALLATION

PROCEDURES


• Front fender [F.F-A]

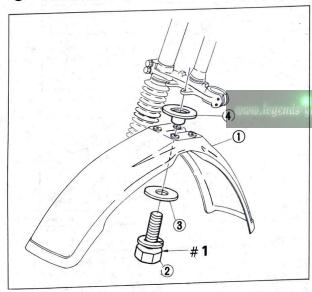

Parts list

No.	Part name	Q'ty	Locating mark	Remarks
1	Front fender	1	S	The state of the s
2	Hexagon bolt with spring washer	4	v	d = 6mm (0.24 in), l = 20 mm (0.79 in)
3	Plain washer	4	V	d = 6 mm (0.24 in)
4	Special washer	4	V	d = 6 mm (0.24 in)


Pront wheel [F.W-A]

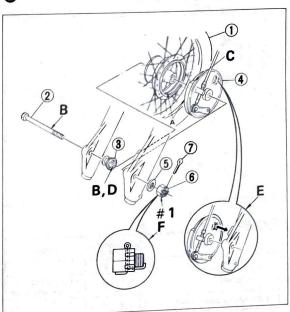

Parts list

No.	Part name	Q'ty	Locating mark	Remarks
1	Front wheel	1	S	
1	The second secon	1	*	d = 12 mm (0.47 in)
	Front wheel axle	1	V	d = 12 mm (0.47 in)
-	Wheel axle collar	1	S	71.53
140	Brake shoe plate assembly	1	5	(0.47:-)
5	Plain washer	1	*	d = 12 mm (0.47 in) D = 22 mm (0.86 in)
6	Castle nut	1	* * * * * * * * * * * * * * * * * * * *	d = 12 mm (0.47 in)
7	Cotter pin	1	٧	


3 Cable holder (Left) [C.H.-E]

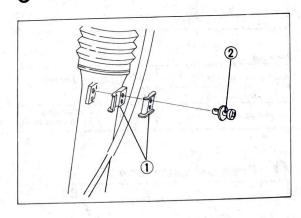

Parts list

dits list				1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
No.	Part name	Q'ty	Locating mark	Remarks
1	Cable holder (Left and Right)	2	*	3
2	Panhead screw with spring spring washer	2	*	d = 6 mm (0.24 in), l = 15 mm (0.59 in)


4 Handlebar [H.B-A]

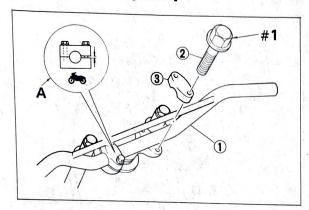

Parts list

No.	Part name	Q'ty	Locating mark	Remarks
1	Handlebar	1	S	
2	Flange bolt	4	v	d = 8 mm (0.32 in), l = 35 mm (1.38 in)
3	Handlebar upper holder	2	V	The Miles


6 Throttle grip [T.G-B]

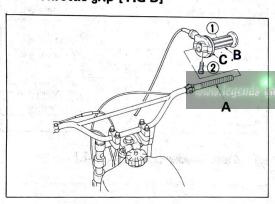


Parts list

No.	Part name	Q'ty	Locating mark	Remarks
. 1	Throttle grip	1.	*	
2	Panhead screw	2	*	d = 5 mm (0.2 in), l = 15 mm (0.59 in)

6 Brake and clutch cable [B.C-A]

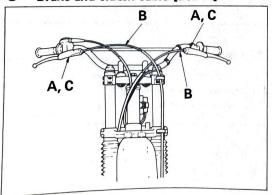


Fuel tank breather pipe [F.B-A]

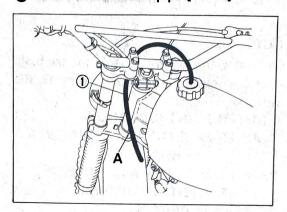

Parts list

No.	Part name	Q'ty	Locating mark	Remarks
1	Fuel tank breather pipe	1	S	Rubber


8 Engine stop switch [E.S-B]

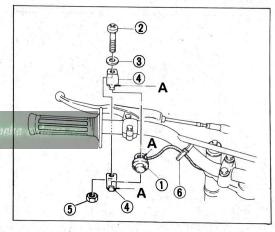

Parts lis

No.	Part name	Qʻty	Locating mark	Remarks
1	Engine stop switch	1		
2	Panhead screw	1	V	d = 3 mm (0.12 in)
3	Plain washer	1	V	d = 3 mm (0.12 in)
4	Engine stop switch holder (Upper and Lower)	2	V	
5	Hexagon nut	1	V	d = 3 mm (0.12 in)
6	Handlebar band	2	V	Plastic


Number plate [N.P-E]

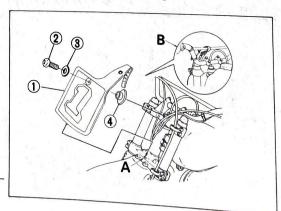

Parts list


No.	Part name	Q'ty	Locating mark	Remarks
1	Number plate	1,	S	
2	Panhead screw	1	v	d = 6 mm (0.24 in), l = 25 mm (0.98 in)
3	Plain washer	1	V	d = 6 mm (0.24 in)
4	Collar	1	V	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1

Footrest (Left) [F.R-C]

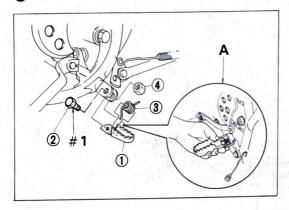

Par	ts list	200.3			1
No.	Part name	Q'ty	Locating mark	Remarks	
1	Footrest (Left)	1	V		
2	Hexagon bolt	1	v	d = 8 mm (0.32 in), l = 28 mm (1.1 in)	maha-enduros.com
3	Return spring	1	V	the state of	12.5
	Self locking nut	1	V	d = 8 mm (0.32 in)	

Side stand [S.S-B]

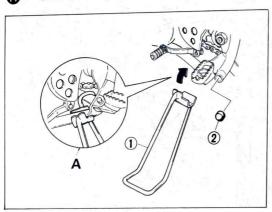


Parts list


No.	Part name	Q'ty	Locating mark	Remarks
1	Side stand	1	S	
2	Blind plug	1	V	Rubber


CABLE ROUTING

WARNING:


Proper cable and lead routing is essential to insure safe vehicle operation.

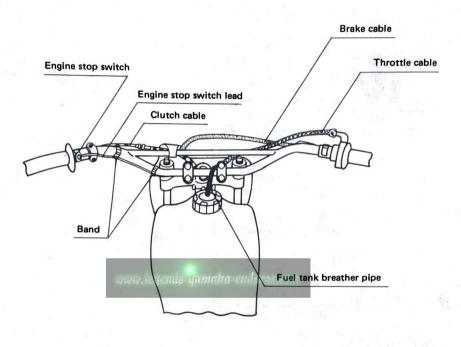

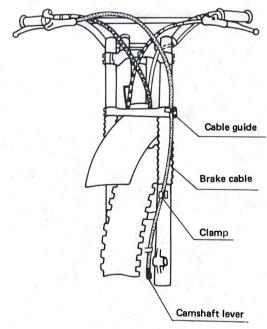

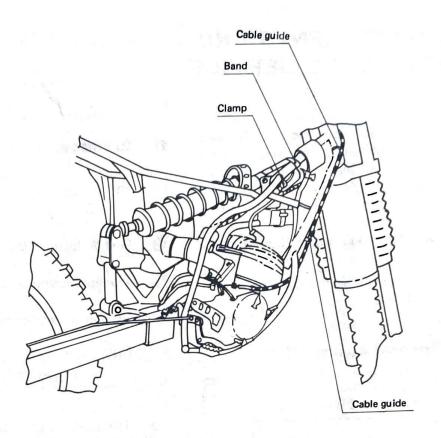

www.legends=yamaha=enduros.co

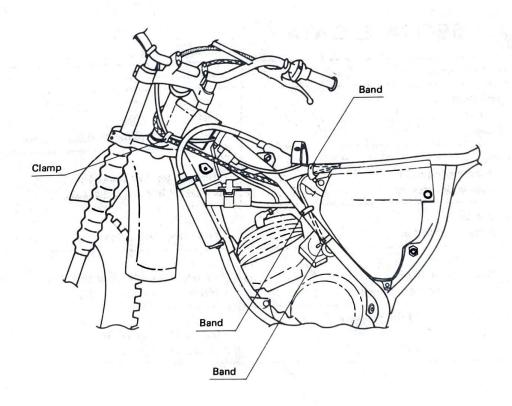

ADJUSTMENTS AND PREDELIVERY SERVICE

NOTE: ____

Please read the following chapter in the Basic assembly manual before proceeding to the adjustments and predelivery service.

CHAPTER 6. APPENDICES

• Front brake adjustment [F.B-A]

Front brake lever free play: $5 \sim 8 \text{ mm} (0.2 \sim 0.3 \text{ in})$

2 Rear brake adjustment [R.B-A]

Rear brake pedal free play: 20 mm (0.8 in)

Rear brake pedal position adjustment [R.P-A]

4 Clutch adjustment [C.A-A]

Clutch lever free play: $2 \sim 3 \text{ mm } (0.08 \sim 0.12 \text{ in})$

6 Throttle cable adjustment [T.C-A]

Throttle cable free play: $3 \sim 5 \text{ mm} (0.12 \sim 0.21 \text{ in})$

- 6 Fuel draining [F.D-A]
- Transmission oil level check [T.L-A]
- Orive chain tension check [D.C-A]

Drive chain deflection: 35 mm (1.47 in)

Troubleshooting [T.S-A]

SERVICE DATA

Idling engine speed:	As desired				
Spark plug:					
Type	N-84 (CHAMPION)				
Gap	0.5 ~ 0.6 mm (0.020 ~ 0.024 in)				
Fuel:					
Recommended fuel	Premium gasoline (Mixed gas 24 : 1)				
Fuel tank capacity	8.2 L (1.8 Imp gal, 2.2 US gal)				
Engine oil:					
Recommended oil	Yamalube Racing 2-cycle oil (See Owner's manual)				
Transmission oil:					
Recommended oil	Yamalube 4-cycle oil or SAE 10W30 mtor oil				
Oil quantity (Periodic oil change)	550 ~ 650 cm ³ (0.58 ~ 0.69 US qt, 0.48 ~ 0.57 Imp qt)				
Fire pressure (Cold tire pressure):					
Front	98 kPa (1.0 kg/cm², 14 psi)				
Rear	98 kPa (1.0 kg/cm², 14 psi)				

TORQUE SPECIFICATION CHART

	Tightening torque		
Parts to be tightened	Nm	m·kg	ft∙lb
Engine:	100		14
Spark plug M14	20	2.0	14
Drain plug M12	20	2.0	14
Chassis:	5	0.5	3.6
Front fender M6 (F.F-A #1)	73	7.3	53
Front wheel axle M12 (F.W-A #1)		2.3	17
Handlebar upper holder M8 (B.C-A #1)	23	0.5	3.6
Throttle grip M5 (T.G-B)		1.5	11
Footrest M8 (F.R-C #1)	15	1.5	
Handle crown.	F2	5.3	38
Steering M14	53	2.3	16
Inner tube M8	23 85	8.5	61
Rear wheel axle M14	85	8.5	61
Pivot shaft M16	31	3.1	22
Rear shock abosrber M10	63	6.3	45
Footrest bracket M10	88	8.8	63
M12	85	8.5	61
"L" shape arm and frame M16	31	3.1	22
Rear shock absorber and "L" shape arm M10 "L" shape arm and "I" shape arm M12	58	5.8	41

www.legends-vamaha-enduros.com

OWNER'S TOOL KIT

	4	
No.	Part name	Q'ty
1	Owner's tool bag	1
2	Special spanner (19-22)	1
3	Spark plug wrench (21)	1
4	Hexagon wrench (8)	1
5	Rotor puller	1
6	Special spanner (32)	1

www.leaends-vamaha-enduros.com

